

Serial ATA PCI Host Adapter AEC-6290/6295

User's Manual

—— Version:1.0 ——



Copyright © 2003 ACARD Technology Corp.

Release: April 2003

Copyright and Trademarks

The information of the product in this manual is subject to change without prior notice and does not represent a commitment on the part of the vendor, who assumes no liability or responsibility for any errors that may appear in this manual.

ACARD and SCSIDE are the trademarks of ACARD Technology Corp. Microsoft and the Windows Logo are the registered trademarks, and Windows is the trademark of Microsoft Corporation. All brands and trademarks are the properties of their respective owners.

This manual contains materials protected under International Copyright Laws. All rights reserved. No part of this manual may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without the written permission of the manufacturer and the author. All inquiries should be addressed to ACARD Technology Corp.

Table of Contents

Chapter 1 Introduction	5
1.1 Overview	5
1.2 Features	5
1.2.1 AEC-6290	5
1.2.2 AEC-6295	5
1.3 Specifications	5
1.4 Package	6
Chapter 2 Hardware Installation	7
2.1 Quick Installation	7
2.1.1 Use Serial ATA HDD	7
2.1.2 Use ATA HDD and Converter	7
2.1.3 Use ATA HDD (for AEC-6295 only)	7
2.2 The Board Layout	8
2.3 Connection of Cable and Power Cord	9
2.3.1 Connect a Serial HDD	9
2.3.2 Connect an IDE HDD	10
2.4 Compatibility	11
Chapter 3 BIOS Setup	12
3.1 IDE Devices	13
3.2 Adapter Setup	13
3.3 Utility	14
3.4 Load Defaults	14
3.5 Exit Setup	15
Chapter 4 System & Driver Installation	16
4.1 In Win 2000/XP	16
4.1.1 Install the Driver	16
4.1.2 Boot from AEC-6290/6295	21
4.2 In Win NT	21
4.2.1 Install the Driver	21
4.2.2 Boot from AEC-6290/6295	22

4.3 In Win 9X/ME	22
4.3.1 Install the Driver	22
4.3.2 Boot from AEC-6290/6295	22
4.4 In Linux	22
Chapter 5 Troubleshooting	23
Appendix A Make An Installation Disk	24
Appendix B ASPITool32 Manager	27

Chapter 1 Introduction

1.1 Overview

ACARD AEC-6290 and 6295 are Serial ATA PCI host adapters. They meet serial ATA 1.0 and parallel ATA 133 specifications. Their advantages are robust data transmission, reduced pin counts, lower power requirement, thinner and longer cabling, etc. They have drop-in compatibility with the current operating environment, too.

1.2 Features

1.2.1 AEC-6290

- An add-on PCI-to-Serial ATA controller
- Data transfer rate up to 150MB/s
- Two independent channels
- Supports up to 2 IDE hard drives

1.2.2 AEC-6295

- An add-on PCI-to-Serial ATA controller
- Data transfer rate up to 150MB/s
- Four independent channels
- Supports up to 6 IDE hard drives

1.3 Specifications

- Power requirement --- Voltage: 3.3V +/- 2%
5V +/- 2%
Current: 0.5A Max.
- Environment --- Operating temperature: 0°C to 70°C
Storage temperature: -20°C to 85°C
- Humidity --- 15% to 90%

- Dimensions --- AEC-6290: 13.0 (W) × 7.6 (H) cm
AEC-6295: 17.5 (W) × 8.1 (H) cm
- Connectors --- AEC-6290: Two 4-pin SATA connectors
AEC-6295: Two 4-pin SATA connectors
Two 40-pin IDE connectors

1.4 Package

When you open the package, please examine the following items.

- AEC-6290/6295 × 1
- Internal Serial ATA Cable × 1
- User's Manual
- ACARD Support CD × 1
- Internal ATA 133 Cable × 1 (for AEC-6295 only)
- Y-splitter Power Cord for IDE Hard Drive (for AEC-6295 only)
- Y-splitter Power Cord for IDE Hard Drive and converter (for the package with AEC-7900 enclosure only)

Chapter 2 Hardware Installation

2.1 Quick Installation

Please follow the 4 steps to install AEC-6290 or 6295 at once.

- (1). Be sure that the system power has been off.
- (2). Open the housing of PC.
- (3). Insert AEC-6290/6295 into an available PCI slot firmly.
- (4). Screw AEC-6290/6295 onto the housing.

2.1.1 Use Serial ATA HDD

When using a serial ATA HDD, follow the 3 steps.

- (1). Connect the serial ATA cable to AEC-6290/6295 and the hard drive (ATA 133 cable is fit for the channel 3 and 4 of AEC-6295).
- (2). Connect the power cord to the power supply and the hard drive.
- (3). Screw the housing of PC, and plug the system power (see Figure 2-3).

2.1.2 Use ATA HDD and Converter

When using an ATA HDD and ATA-to-serial converter, follow the 4 steps.

- (1). Connect one end of the serial ATA cable to AEC-6290/6295 and another to the ATA-to-serial converter.
- (2). Connect the ATA-to-serial converter to the ATA HDD, and connect the small 4-pin power cord to the ATA-to-serial converter.
- (3). Connect the power cord to the HDD.
- (4). Screw the housing of PC, and plug the system power (see Figure 2-4).

2.1.3 Use ATA HDD (for AEC-6295 only)

When using an ATA hard drive, follow the 3 steps.

- (1). Connect one end of the ATA cable to AEC-6295 and another to the ATA HDD.
- (2). Connect the power cord to the HDD.
- (3). Screw the housing of PC, and plug the system power (see Figure 2-5).

2.2 The Board Layout

The layout of AEC-6290 board is shown as follows.

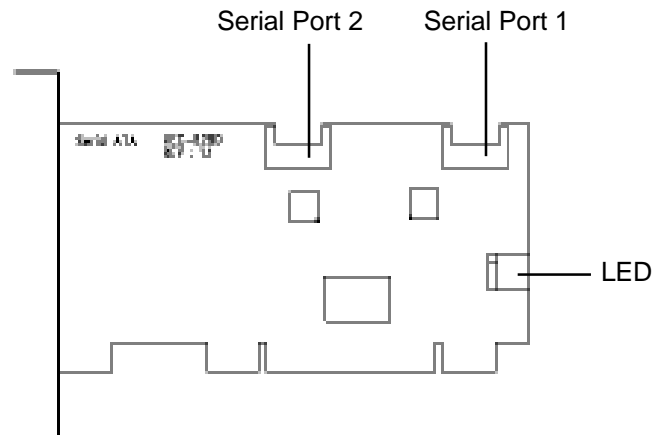


Figure 2-1

The layout of AEC-6295 board is shown as follows.

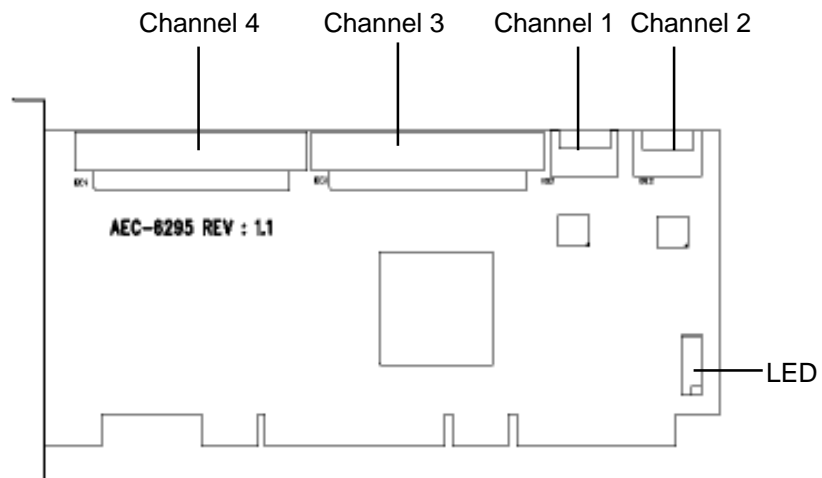


Figure 2-2

2.3 Connection of Cable and Power Cord

It is quite easy to connect the ATA 133 cable, serial ATA cable, and the power cord, because they are foolproof. Here we take AEC-6295 as an example. On the 4-channel adapter Channel 3 and Channel 4 are two channels for connecting IDE hard drives while Channel 1 and Channel 2 for connecting serial ones.

2.3.1 Connect a Serial HDD

- (1). Connect the serial ATA cable to AEC-6295 and the serial hard drive.
- (2). Connect the power cord to the hard drive.



Figure 2-3

But If your hard drive is not a serial one, you need a converter to connect.

- (1). Connect one end of the serial ATA cable to AEC-6295 and another to the ATA-to-serial converter.
- (2). Connect the converter to the IDE HDD, then connect them with a Y-splitter power cord.



Figure 2-4

2.3.2 Connect an IDE HDD

- (1). Find out a color line of the ATA 133 cable indicating pin 1 of the connector.
- (2). Find out pin 1 of the connector on the IDE hard drive.
- (3). Connect the ATA 133 cable to the IDE hard drive by pin 1 to pin 1.
- (4). Connect the power cord to the IDE hard drive.



Figure 2-5

NOTICE: The ATA 133 cable has three connectors. The blue connector is connected to AEC-6290/6295, the middle one to HDD set as Slave and the remaining one to HDD set as Master.

2.4 Compatibility

AEC-6290 and 6295 support native serial ATA hard drives and DMA 133/100/66 hard drives. AEC-6290 needs to be used together with AEC-7900. For the newest compatibility, please visit <http://www.acard.com>

Chapter 3 BIOS Setup

After installing AEC-6290/6295 and booting the host PC, you will see the following figure indicating your BIOS version, hard drive information, etc. Here we only take AEC-6290 as an example.



Figure 3-1

Please press <F1> or <F10> to enter BIOS Setup Utility.

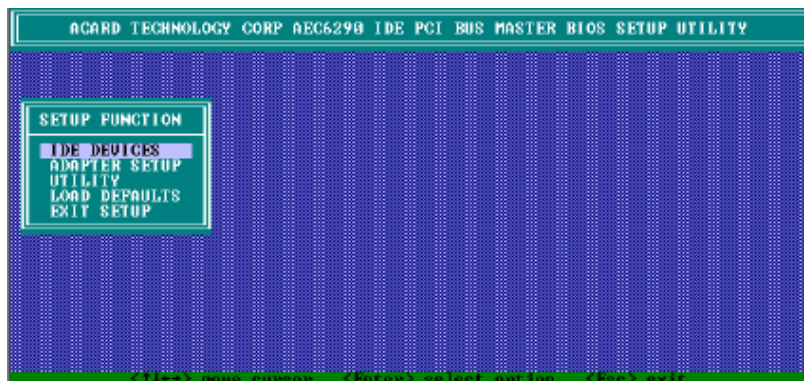


Figure 3-2

On BIOS screen use <↑>, <↓> to change items, press <Enter> or space bar to select, and press <Esc> to cancel or exit. Meanwhile at the bottom of the screen, you can see the location and capacity of hard drives.

3.1 IDE Devices

The next figure shows the information of IDE devices connected to AEC-6290/6295.

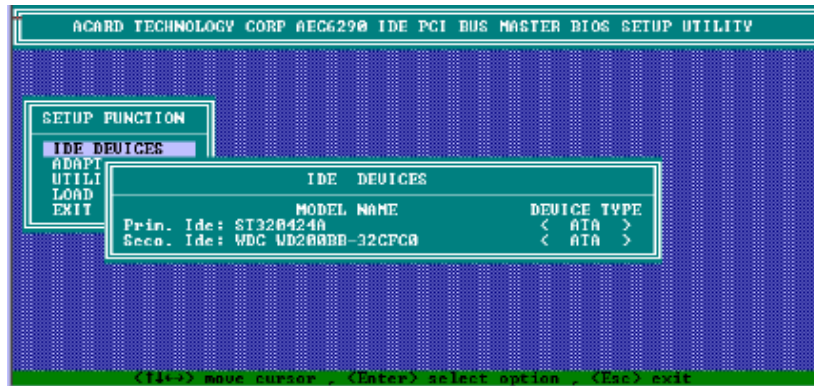


Figure 3-3

3.2 Adapter Setup

- Int 13h Bios Enable: Set if to load the BIOS of AEC6290/6295 to the system upon booting.
- CD-ROM Bootable: Set if to boot from CD-ROM.
- Zip Supported: Enable this option when using Zip tape drive.
- Device Properties
 - Ch1 Ser: Enable or disable the Serial ATA device on channel 1.
 - Ch2 Ser: Enable or disable the Serial ATA device on channel 2.
 - Ch3 Mas: Enable or disable the Master device on channel 3.
 - Transfer Mode: IO mode can be <AUTO> or adjusted manually.
 - Ch3 Slv: Enable or disable the Slave device on channel 3.
 - Transfer Mode: IO mode can be <AUTO> or adjusted manually.
 - Ch4 Mas: Enable or disable the Master device on channel 4.
 - Transfer Mode: IO mode can be <AUTO> or adjusted manually.
 - Ch4 Slv: Enable or disable the Slave device on channel 4.
 - Transfer Mode: IO mode can be <AUTO> or adjusted manually.
- Boot HardDisk Device: Set a bootable IDE device.

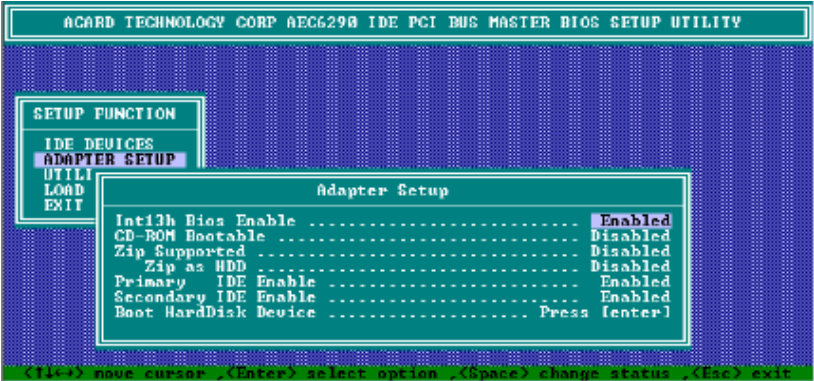


Figure 3-4

3.3 Utility

- Quick Erase: It can quickly erase the data on a selected hard drive. Beware that the data and the partitions will be completely erased.

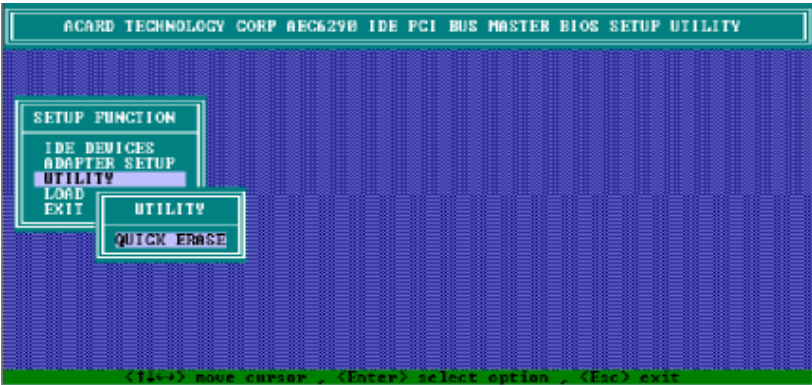


Figure 3-5

3.4 Load Defaults

This can recover the defaults of BIOS.

3.5 Exit Setup

- Cancel: It makes ineffective or inoperative.
- Update Data & Exit: Save and leave.
- No update, Exit: Leave without saving.

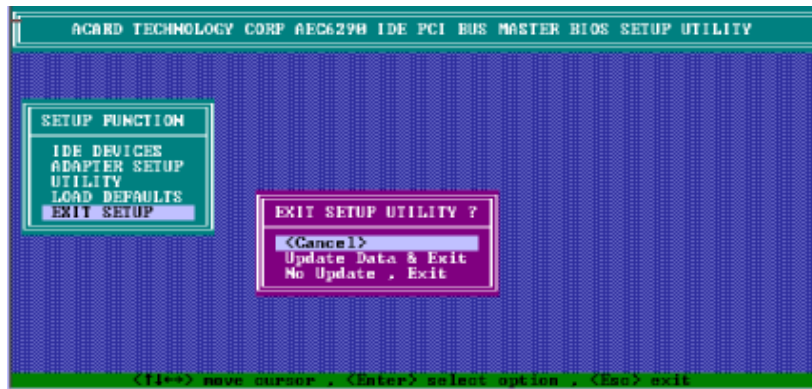


Figure 3-6

Chapter 4 System & Driver Installation

Driver installation varies somewhat in different operating systems. You can install the driver of AEC-6290/6295 in an existing OS, or install a new OS to the hard drive connected to AEC-6290/6295. The second method can be said to boot from the adapter.

4.1 In Win 2000/XP

We only take installing the driver of AEC-6295 in Windows XP as an example.

4.1.1 Install the Driver

Please follow the steps given below to install the driver of AEC-6295.

- (1). After installing AEC-6295, boot the PC and enter Windows XP.
- (2). The system will detect a new device and require a directory to access. Select "Install from a list or specific location (Advanced)". Then click "Next".



Figure 4-1

- (3). Follow the wizard. Windows XP will require the driver's location. Select "Include this location in the search".
- (4). Select "Browse" to find the driver's directory such as A:\WinXP.

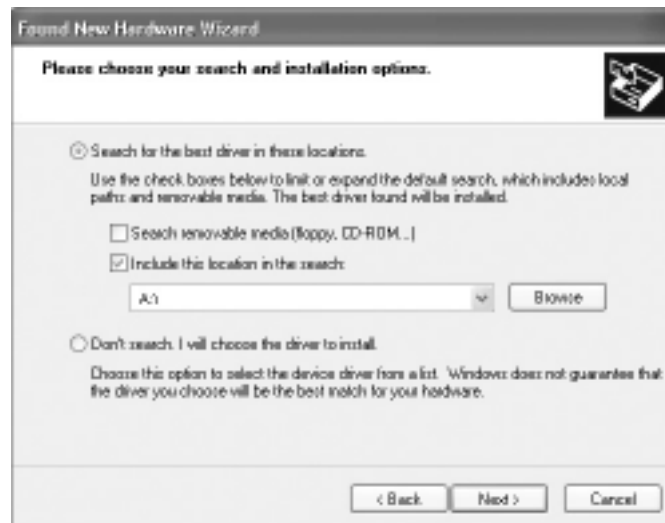


Figure 4-2

- (5). After the wizard finds the driver, click "Next" to install it.

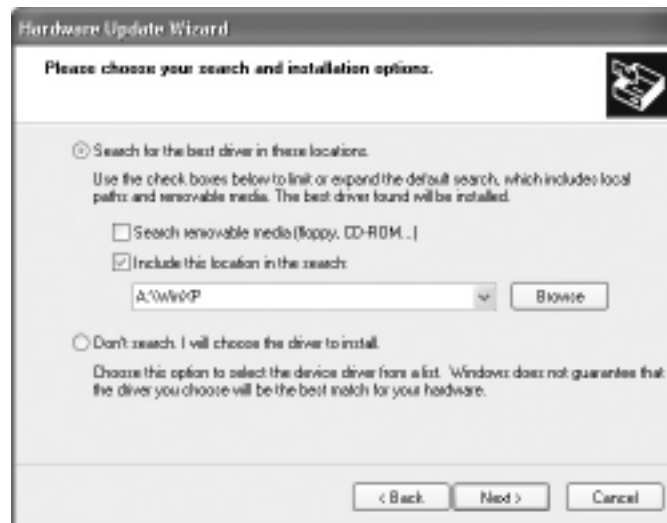


Figure 4-3

(6). Click “Continue Anyway” to continue the installation.

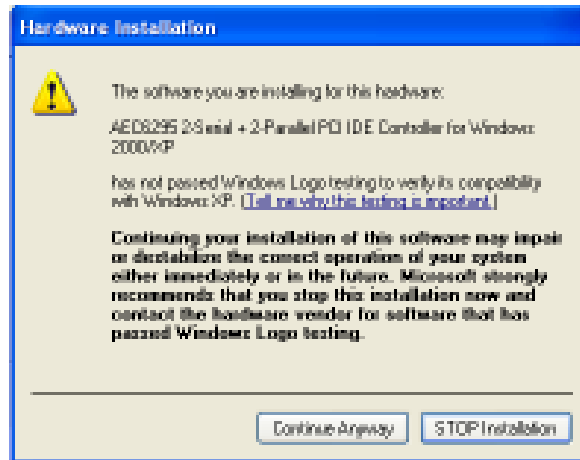


Figure 4-4

(7). Follow the directions. The system will complete the setup automatically.

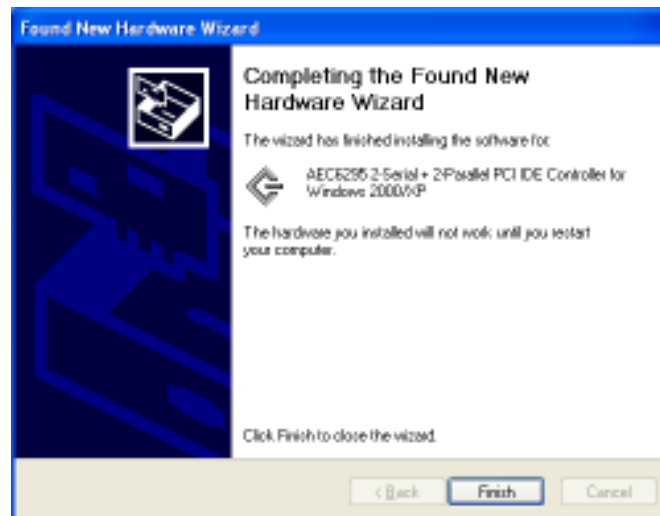


Figure 4-5

(8). After setup, please boot the system again, and click “My Computer”.



Figure 4-6

(9). Find “View system information”, and double click it.



Figure 4-7

- (10). In “System Properties” click “Hardware” and then “Device Manager”.

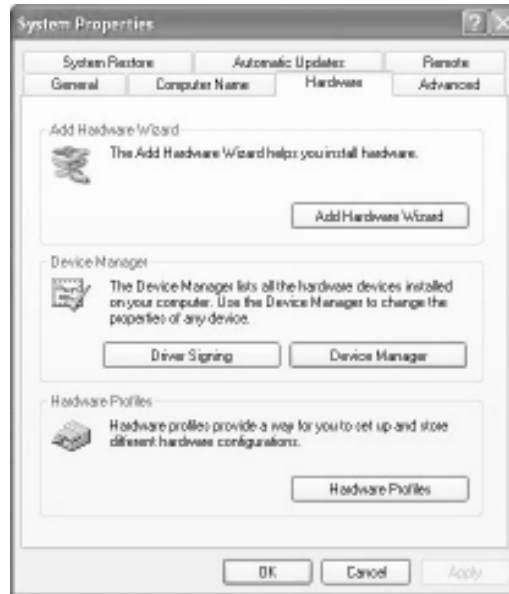


Figure 4-8

- (11). Under “SCSI and RAID Controllers” double click “ACARD AEC-6295 Serial ATA PCI Host Adapter” to see if the card has been installed successfully.

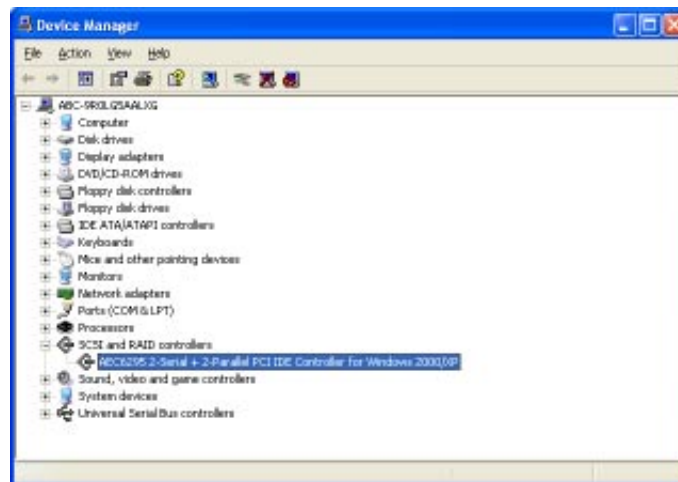


Figure 4-9

NOTICE: During driver installation, if you encounter the problem of Windows logo, please click "Continue Anyway". Windows logo is a mechanism designed to prevent OS from working abnormally because of installing unidentified software. Yet, the driver of AEC-6290 or 6295 is proven not to affect the entire work of OS.

4.1.2 Boot from AEC-6290/6295

Please follow the steps given below to install a new OS to the hard drive connected to AEC-6290/6295. Thus you can boot from the adapter.

- (1). Find the support CD containing the driver of AEC-6290/6295 from the package.
Copy the driver into a formatted floppy disk, and label it. Refer to Appendix A.
- (2). Place the original CD of Win 2000 or XP into CD-ROM, and boot from hence.
- (3). On seeing the first blue screen, you need to press <F6> to install the OS to the hard drive connected to SCSI or RAID card. After the installation program loads needed files, please press <S> and put the driver disk into floppy drive.
- (5). The installation program will load the driver of AEC-6290/6295. And you can select the hard drive or array into which you intend to install the OS. Then follow the wizard to complete.
- (6). During installation, if you encounter the problem of Windows logo, please click "Continue Anyway".

4.2 In Win NT

4.2.1 Install the Driver

Please follow the steps given below to install the driver of AEC-6290/6295.

- (1). After installing the adapter, boot the original system again.
- (2). Click "My Computer", "Control Panel", "SCSI Adapters", and "Drivers". Then click "Add". Put the driver disk or CD of AEC-6290/6295, and specify the driver's location.

- (3) Follow the wizard to complete. After execution, boot the system again.

4.2.2 Boot from AEC-6290/6295

Please refer to 4.1.2.

4.3 In Win 9X/ME

4.3.1 Install the Driver

- (1). The procedures are similar to those in 4.1.1. Follow the wizard to complete.
- (2). After installation, boot the system again. Then click "My Computer", "Control Panel", "System", "Device Manager", and "SCSI or RAID Controllers". If you can find AEC-6290/6295, that means successful installation.

4.3.2 Boot from AEC-6290/6295

- (1). Boot the computer and enter DOS. Build an array on BIOS, then execute FDISK to partition the hard drive connected to AEC-6290/6295.
- (2). Boot again, and format the newly created partition.
- (3). Boot the system again. Place the original CD of 9X/ME into CD-ROM, and begin installing the OS.
- (4). Click "My Computer", "Control Panel", "System", and "Device Manager". You will learn that the system has found an unknown SCSI controller.
- (5). Put the driver of AEC-6290/6295, and let the system search automatically. Or you can specify the driver's location, and tell OS to get for installation. Follow the wizard to complete.

4.4 In Linux

There is a variety in Linux version, but the installation is similar. Please refer to README.txt in various versions, or visit <http://www.acard.com> to download the installation guide.

Chapter 5 Troubleshooting


After installing AEC-6290/6295, if it cannot work normally, please use the checklist given below to solve the problems.

- (1). Inspect if the power cord's connectors are loose, or if the watt of power supply is not sufficient.
- (2). Inspect if the jumper settings on the hard drive are all Master or Slave.
- (3). Inspect if AEC-6290/6295 is firmly inserted into the PCI slot.
- (4). Inspect if the connectors of ATA 133 cable are loose or damaged.


Appendix A Make An Installation Disk


For installing an OS like Windows 2000/NT/XP into a hard drive with ACARD adapter, you need a floppy disk containing the adapter's driver to boot the hard drive. Please follow the steps below to make an ACARD adapter's driver disk.

1. Insert ACARD Support CD into CD-ROM.
2. Click "Explore This CD" to get the CD file window.

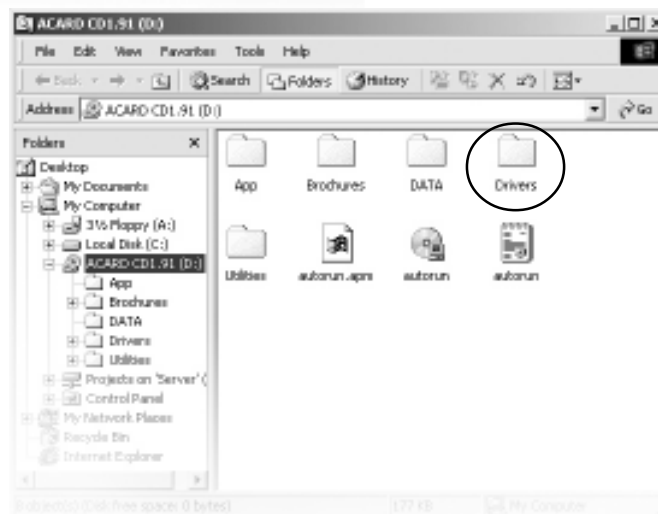

3. Under the "Driver" folder find your adapter's model number. For example, AEC-6880's driver is Driver>IDE>AEC6880V1.3.

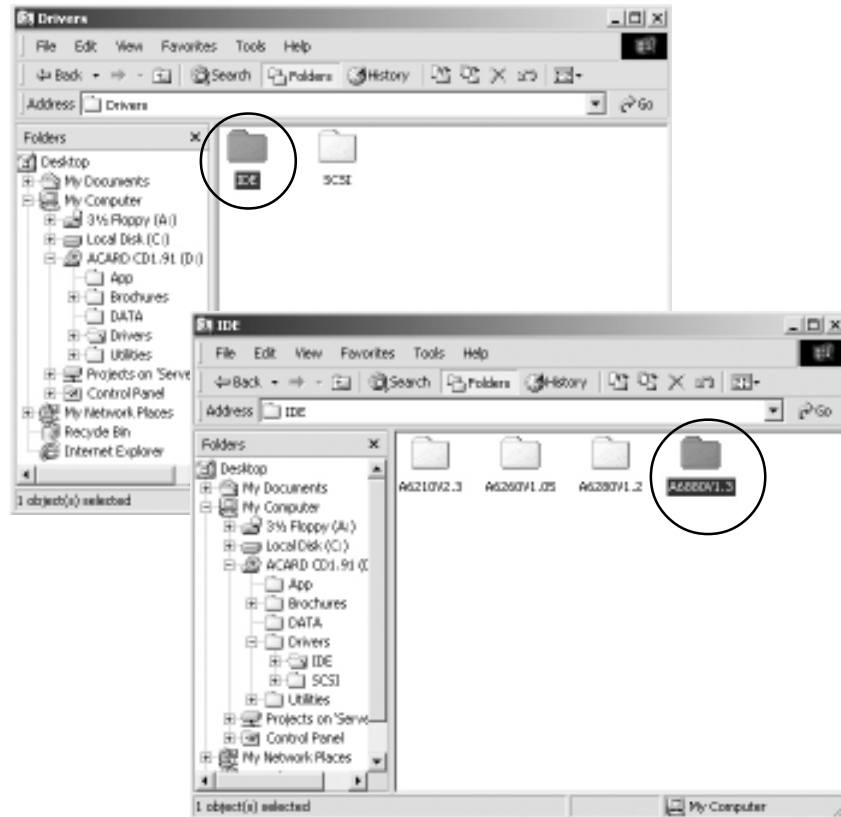

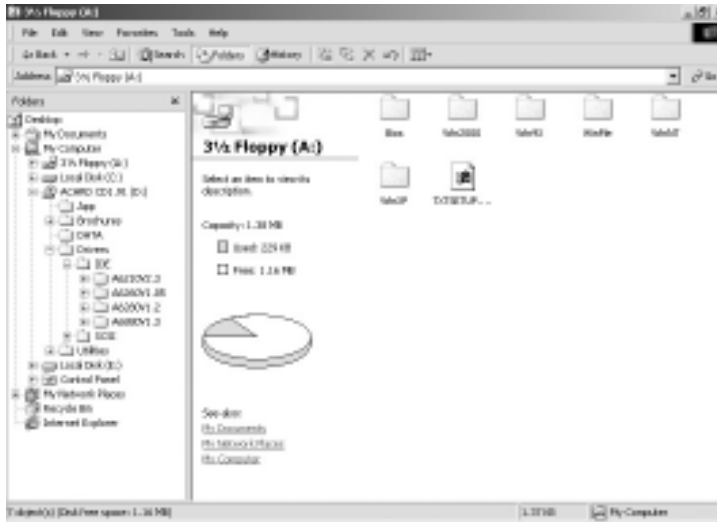

Appendix B ASPITool32 Manager

The ASPITool32 Manager program has many functions aimed at making the hard drives work properly under the Windows OS while they are connected with the ACARD SCSI or IDE adapter. The ASPITool32 Manager program is proudly developed by ACARD. You may get the setup program from the ACARD Driver CD.

ASPITool32 Manager Functions

- 1.**FDsik**: Create a partition on the hard drive.
- 2.**Disk QEraser**: Quickly erase the contents of the hard drive. Please beware that the data on the partition will be completely erased.
- 3.**Disk Format**: Format the partition.
- 4.**Disk Diagnose**: Detect the hard drive and check whether it works properly.
- 5.**Disk information**: Provide the information of BPB and the partition.
- 6.**Disk Verify**: Verify the hard drive and check if there is any bad sector.
- 7.**On Now**: Scan the SCSI bus again and check if there is any new device added.
- 8.**About**: Provide information of ASPITool32.
- 9.**Hide**: Hide the tool bar.
- 10.**Disk Express Setup**: Instruct how to create and format the partition.



Technical Support Form

Email: support@acard.com

<http://www.acard.com>

Model	AEC-6290/6295		F/W Version	
System Configuration				
Motherboard				
BIOS version				
SCSI adapter				
Chipset				
Memory				
Display card				
Other I/O card				
OS version				
Hard Disk Configuration				
Hard Disk Model/type				
Capacity				
Firmware version				
Others				
Problem Description				

MALAE629XXE10-0